INSTRUCTION SHEET NO: 25013727 Rev. B


February 26, 2018



IMPORTANT: Read the Snowplow Operator's Manual before assembling this kit.

| Minimum | Vehicle | Recommendations |
|---------|---------|-----------------|
| | | |

MFR Snowplow Prep Package REAR BALLAST - 500 lbs. when plow is attached. Secure Weight Behind Rear Wheels.

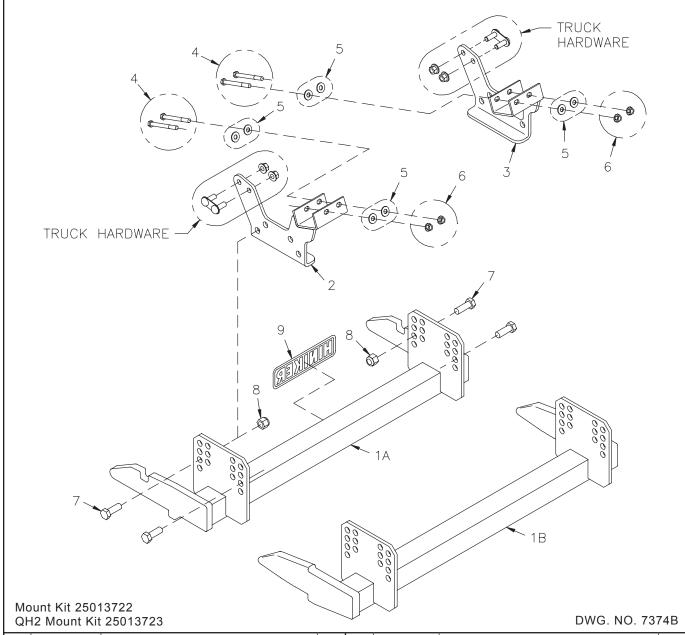

| REF. NO. | PART NUMBER | DESCRIPTION | QTY. | REF. NO. | PART NUMBER | DESCRIPTION | QTY. |
|-------------|----------------|---|------|-------------|----------------|---|------|
| 1A | 25013277 | Prong Weldment | 1 | 6 | 951-005-003 | Lock Nut 3/8-16 Mac Lock | 4 |
| 1B | 25013276 | Prong Weldment - QH2 | 1 | 7 | 950-001-132 | Hex Head Cap Screw 5/8-11 x 1 3/4 Gr. 5 | 8 |
| 2 | 25013875 | LH Bracket Weldment | 1 | 8 | 060756 | Lock Nut 5/8-11 Nylon Insert | 8 |
| 3 | 25013874 | RH Bracket Weldment | 1 | 9 | 25010008 | Hiniker Decal | 1 |
| 4 | 950-001-014 | Hex Head Cap Screw 3/8-16 x 3 3/4 Gr. 8 | 4 | | 25013728 | Bolt Bag | 1 |
| 5 | 952-004-084 | Hardened Flat Washer, 3/8 Inch | 8 | l | | | |

All hardware should be tightened only enough to ensure safety during assembly. Fully tighten all hardware after entire assembly is completed.


GRADE 5 TYPE B & F LOCK NUT TORQUE VALUES

| Size | Ft-lbs. | N-m |
|-------|---------|---------|
| 5/16" | 13-18 | 17-25 |
| 3/8" | 23-33 | 31-44 |
| 1/2" | 58-82 | 79-112 |
| 5/8" | 117-165 | 158-223 |

GRADE 5 BOLT TORQUE VALUES*

| Size | Ft-lbs. | N-m | | |
|-----------------------------------|-------------|---------|--|--|
| 1/4" | 8-12 | 11-16 | | |
| 3/8" | 29-41 | 39-56 | | |
| 1/2" | 1/2" 73-103 | | | |
| 5/8" | 146-206 | 198-279 | | |
| * Applications without lock nuts. | | | | |


 Unthread bolt assemblies from both ends of the truck frame cross member. Hardware will be replaced by hardware supplied in the mount kit, and should be returned to the vehicle owner.

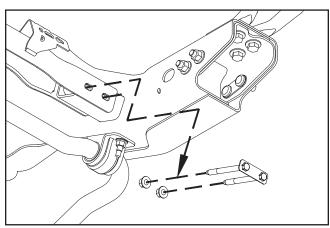

DWG NO. 7375

Unbolt channel brackets from the front of each frame rail, taking care to prevent bolt assemblies from falling into the frame.


Return channels to the vehicle owner for reinstallation if the plow mount is removed in the future.

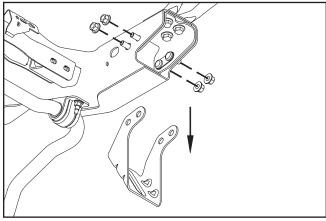

DWG NO. 7376


Reinstall nuts onto the two bolts extending through the outer wall of the rails.

Carefully lift the LH and RH mount brackets onto bolts extending through the inner wall of the rails, then thread nuts back onto bolts.

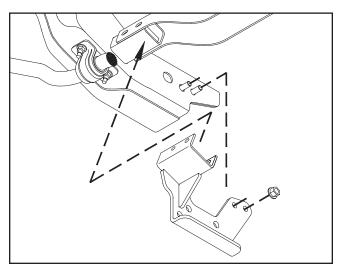


DWG NO. 7377

Fasten rear bracket channels to the vehicle cross member with two 3/8 inch x 3 3/4 inch hex bolts, flat washers and lock nuts supplied with the mount kit.

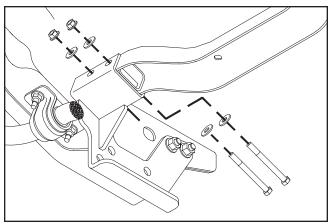


DWG NO. 7378B

3. Fasten the mount plates of the prong weldment to the LH and RH brackets with four 5/8 inch x 1 3/4 inch hex bolts and lock nuts per side.

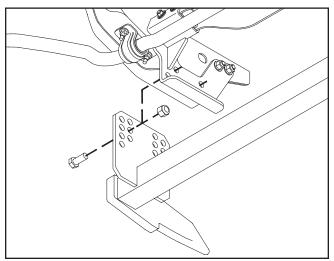

DWG NO. 7379A

The bottom edges of the prongs should measure about 10 inches above the ground.

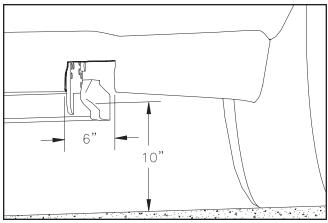

DWG NO. 7380

Notch the bottom edge of the front bumper plastic around the two prongs to provide clearance for the receivers on the plow frame when attaching the plow to the truck. Remove only the least amount of material required for clearance to preserve the appearance of the truck.

4. Fully tighten all hardware to specified torque values.